

Recommended Maintenance Schedule Sterndrive Models

Task Interval	Maintenance to be Performed
Weekly	<ul style="list-style-type: none"> • Check engine oil level • Check sterndrive gear lube level • Check trim pump oil level • Check steering fluid level
Monthly	<ul style="list-style-type: none"> • Check water inlets for debris • Check and clean seawater strainer • Check coolant levels • Check Battery Connections and fluid level
Every 100 Hours or Annually Whichever Comes First	<ul style="list-style-type: none"> • Change engine oil and filter • Service the sterndrive and changes the gear lube • Replace the water-separating fuel filter element • Clean the flame arrestor and check crankcase ventilation hoses. • Inspect the condition and the tension of the belts • Check coolant level and antifreeze concentration
Every 200 Hours or 3 Years	<ul style="list-style-type: none"> • Complete drive service, including inspect u-joints, splines and bellows. Check clamps and check engine alignment, lubricate u-joint splines and cross bearing. Lubricate gimbal bearing and engine coupler (all above is included in a complete drive service) NOTE: Lubricate engine coupler every 50 hours if operated at idle for prolonged periods of time. • Tune-up engines
Every 300 Hours or 3 Years	<ul style="list-style-type: none"> • Check engine mounts and tighten to specs • Check electrical system for loose, damaged or corroded fasteners • Check the cooling and exhaust system hose clamps for tightness, inspect both systems for damage or leaks. • Replace seawater pump impeller and any other worn components as needed • Inspect the exhaust system components. If equipped with water shutters (flapper valves), verify that they are not missing or worn. • Replace engine batteries.
Every 5 Years	<ul style="list-style-type: none"> • Replace the coolant/antifreeze. Replace every two years if not using extended life coolant/antifreeze